



Surface Mounted Box

JE342 series


1

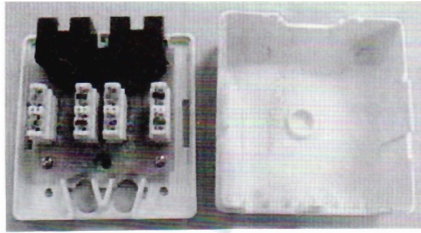

Unshielded

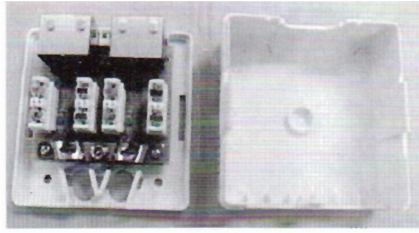


Half shielded

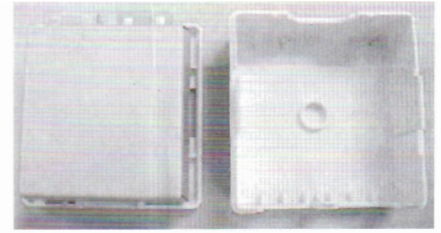


Full shielded

2

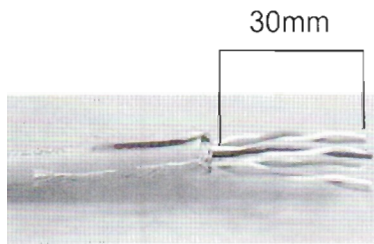

Strip approximately 30mm of the cable jacket, and separate the wires into 4 pairs.

3

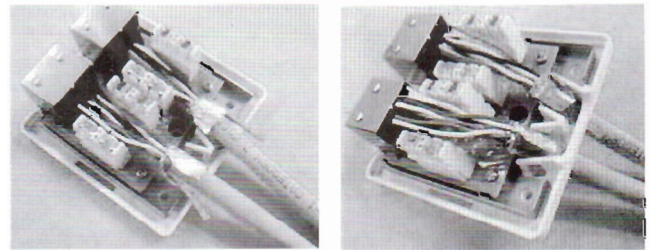


JE342 series provides two entrances for cables, please pre-insert the cables before installation.

4

	T568A	T568B
Pin 1	White/Green	Pin 1 White/orange
Pin 2	Green	Pin 2 Orange
Pin 3	White/Orange	Pin 3 White/Green
Pin 4	Blue	Pin 4 Blue
Pin 5	White/Blue	Pin 5 White/Blue
Pin 6	Orange	Pin 6 Green
Pin 7	White/Brown	Pin 7 White/Brown
Pin 8	Brown	Pin 8 Brown


Complete wiring instruction for T568A & T568B,

5

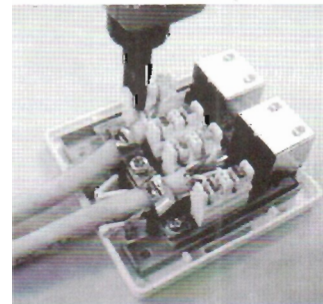


Follow the wiring instruction and IDC color-coding to punch the wires by 110 or KRONE punching tool.

6

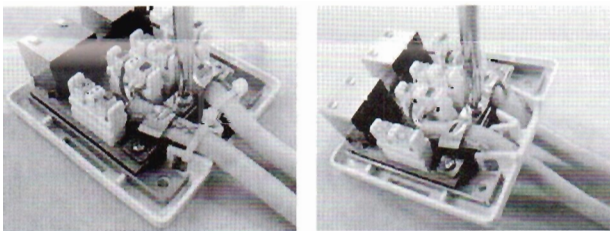

Fasten the cable holder and make sure the foil or braid shield makes contact with the cable holder.

7

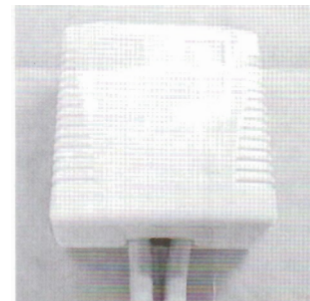

Place the upper cover to complete the installation.